

Spectrum Firmware Update Instruction


Step One

Close all other programs except a browser, you will find help here: <http://www.litegear.com/spectrum-os/downloads/>

Step Two


Find and run Spectrum_Firmware_Update_1.3.3.4.exe.

A.) When you see this, click YES.

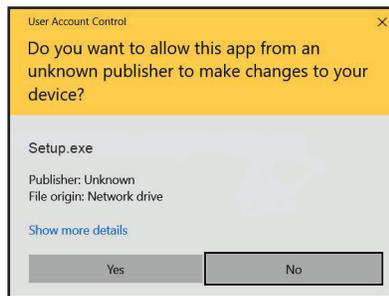


Step Three

Install the new Spectrum updater - click Next.

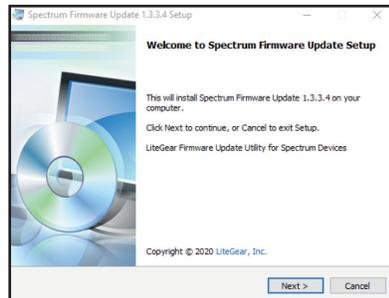


Step Four

This is a Read Me file. It tells you what the installation will do. Please read it. When you are ready, click Next.

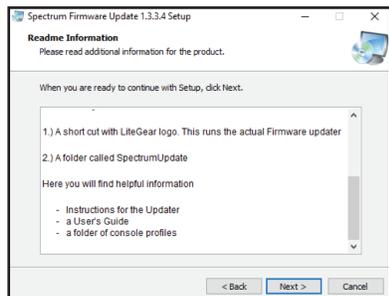



Step Five

Setup can perform additional tasks here. Be sure to keep 'Spectrum Firmware Update' for Program Group Name. Once you've selected your tasks, click Install.

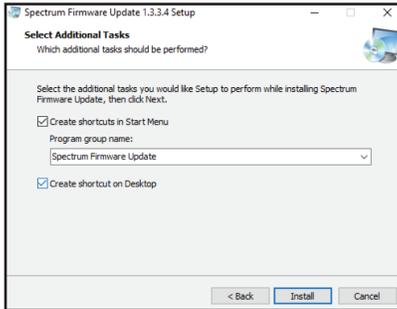

Step Six

This part makes sure you have the USB driver needed for your Updater cable. Click extract and follow the instructions on the following windows.

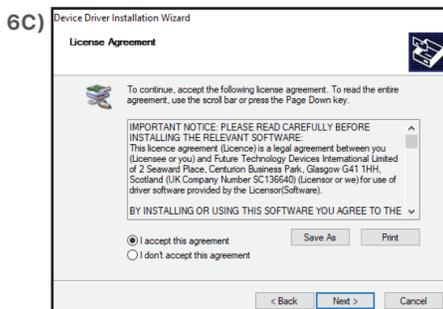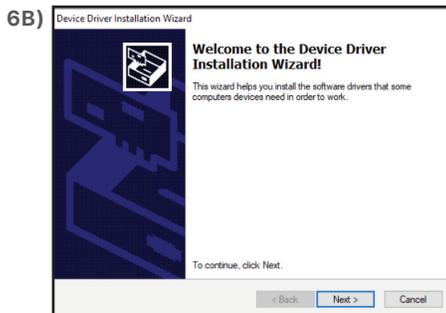

Step Six Continued



Step Seven

You're almost done. This is the final page. If your updater cable is plugged in, your ballast powered up, and you've navigated to the Firmware update page on the ballast, leave the first check and the program will launch and you're ready to update the firmware on the ballast.

